
Clutch

CLUTCH - HYDRAULICS

| Description | Qty | Part # | | |
|-----------------------------------------------------------------------------------|-----------|-------------------|--|--|
| CLUTCH MASTER CYLINDERS | | | | |
| Master Cylinder, Clutch, Shared Reservoir | 1 | 5737 | | |
| with Brakes Series II & IIA, Non-Girling | | | | |
| Master Cylinder - Clutch Shared Reservoir | 1 | 5738 | | |
| with Brakes Series II & IIA - Girling | | | | |
| Master Cylinder, Built-in Reservoir used | 1 | * NLA 6821 | | |
| IIA w/ Power Brakes & all Series III - Non-Gir | ling | | | |
| Master Cylinder, Built-in Reservoir | 1 | 6822 | | |
| IIA with Pwer Brakes & all Series III - Gir | ling | | | |
| Cap for M C with Built-in Reservoir | 1 | 6018 | | |
| → SEAL KIT FOR REBUILDING ALL ABOVE | KIT | 1945 | | |
| CLUTCH SLAVE CYLINDERS & PARTS | | | | |
| Slave Cylinder, II & IIA | 1 | 1999 | | |
| Push Rod for II & IIA Slave Cylinder | 1 | 1826 | | |
| Clevis for Slave Cylinder Push Rod | 1 | 6248 | | |
| Clevis Pin for 6248 | 1 | 5887 | | |
| Cotter Pin for Clevis Pin 5887 | 1 | 6871 | | |
| Bleed Screw | 1 | 5798 | | |
| Seal Kit to Rebuild Slave Cylinder | 1 | 1957 | | |
| Slave Cylinder, Series III | 1 | 6751 | | |
| Push Rod for Slave Cylinder #6751 | 1 | 2897 | | |
| → SEAL KIT TO REBUILD SLAVE CYLINDER | KIT | 1957 | | |
| RESERVOIR & PIPES | | | | |
| SERIES II & IIA PIPES | | | | |
| Reservoir Clutch/Brake Combined (plastic) | 1 | * NLA 5898 | | |
| Adaptor - Clutch Pipe to Master Cylinder | 1 | 6048 | | |
| (3/16" to 1/4") | | | | |
| Steel Pipe Reservoir to Clutch Master (Ll | H) 1 | 5654 | | |
| Steel Pipe, 3/16" Clutch Master to Hose (LH) | , 1 | *NLA 5656 | | |
| Steel Pipe, 1/4" Clutch Master to Hose (LH) | 1 | * NLA 6047 | | |
| Hose - Flexible for Slave - 15 1/2" | 1 | 77 | | |
| Cap, Reservoir | 1 | 6018 | | |
| Clutch Hose 1/4" | 1 | 6897 | | |
| SERIES III PIPES | | | | |
| Steel Pipe, Lower, Master Cylinder to Slave | 1 | 6882 | | |
| Steel Pipe, Upper, Master Cylinder to Slave | 1 | 6896 | | |
| Hose - Flexible to Slave - 10 1/4" | 1 | 6898 | | |
| Steel Pipe, Bleed Screw from Slave | 1 | 6752 | | |
| Bleed Screw | 1 | 5798 | | |
| BRAKE FLUID | | | | |
| Due to the higher natural rubber content of British Hydraulic Seals, we recommend | | | | |
| that only Castrol LMA Fluid be used. Other Fluids may dissol | | | | |
| Castrol Fluid - 12 oz. Can | as needed | 2501 | | |
| Castrol Fluid - Quart Can | as needed | 2521 | | |
| CLUTCH, MISCELLANEOUS | | | | |
| Clutch Aligning Tool (plastic) | 1 | * NLA 2848 | | |
| Pedal Cover, Clutch/Brake | 2 | 2802 | | |
| Pedal Return Spring, 3" | 1 | 6542 | | |
| Pedal Return Spring, 4" | 1 | 5876 | | |
| Oil Seal Primary Pinion, Series III | 1 | 6709 | | |
| CROSS SHAFT PARTS | | | | |
| Connecting tube for Cross Shaft | 1 | 1515 | | |
| Pin for Cross Shaft | 1 | 3078 | | |
| Bushing for Cross Shaft | 2 | 827 | | |
| Felt Ring for Bushing | 2 | 476 | | |
| Copper Washer for #77 Hose | 1 | 233220 | | |
| | | | | |

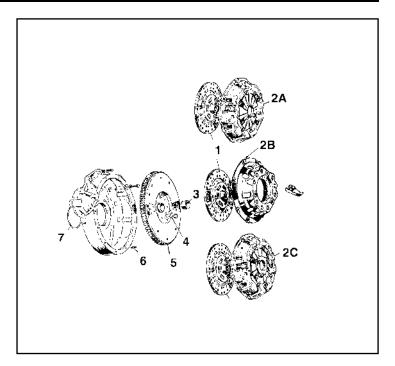


CLUTCH, PLATE & BELL HOUSING

| Ref # | Description | Qty | Part # |
|-----------|----------------------------------------|-----------|-------------------|
| 1 | Clutch Disc, 9-1/2" - all | 1 | 5387 |
| 1 | Clutch Disc, 9" early, using | | |
| | 4074 pressure plate | 1 | 393 |
| 2A | Pressure Plate, Series III | 1 | 6827 |
| 2B | Pressure Plate, Series I, II, IIA - | | |
| | 9" Clutch (3 finger type) 1 4074 | | |
| 2C | Pressure Plate, Series I, II, IIA | | |
| | 9-1/2" Clutch (diaphragm type) | 1 | 5427 |
| not shown | Clutch Aligning Tool | 1 | * NLA 2848 |
| 3 | Bush, Primary Pinion | 1 | 8 |
| not shown | Dowel Locating Clutch Cover | 2 | 1310 |
| 4 | Special Bolt, Flywheel to Crankshaft | 8 | 1468 |
| 5 | Ring Gear | 1 | 69 |
| 6 | Stud, Flywheel Housing to Bell Housing | 12 | 1816 |
| 7 | Sealing Ring, Flywheel Housing | 1 | 442 |
| not shown | Grommet, Bell Housing | | |
| | Clutch Withdrawal Shaft | 1 | 6368 |
| | (I, II, IIA) | | |
| not shown | Grommet, Left Hand Side, | | |
| | Early models | 1 | 6373 |
| not shown | Bellhousing Stud | as needed | 1816 |
| not shown | Nut, Bellhousing Stud | as needed | 2912 |
| not shown | Dowel, Locating, Flywheel | 2 | 192 |
| not shown | Bolt 3/8" Bellhousing | | 2912 |
| → | CLUTCH KIT SERIES III | KIT | 5380 |
| → | CLUTCH KIT SERIES IIA | KIT | 5381 |
| → | CLUTCH KIT SERIES II/IIA 9" | KIT | 5382 |
| | | | |
| 1 | | | |


**NLA* = No longer available.

Clutch

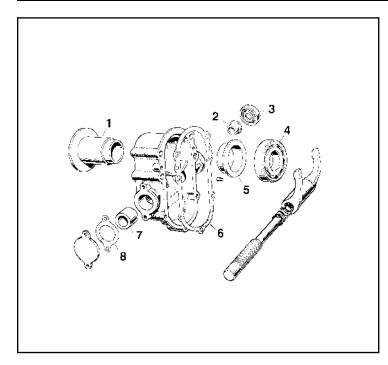

CLUTCH RELEASE, SERIES IIA

| Ref # | Description | Qty | Part # |
|-----------|---------------------------------|-----|------------------|
| 1 | Clutch Withdrawal Sleeve | 1 | 6312 |
| 2 | Bush for Cross Shaft, small | 1 | *NLA |
| 3 | Oil Seal | 1 | 200 |
| 4 | Withdrawal Thrust Bearing | 1 | 285 |
| 5 | Bush for Withdrawal race sleeve | 1 | * NLA 499 |
| 6 | Joint washer, Suffix "A" | 1 | * NLA 450 |
| 6 | Joint washer, Suffix "B" on | 1 | * NLA 280 |
| 7 | Bush for Cross shaft, large | 1 | *NLA |
| 8 | Joint washer | 1 | 835 |
| not shown | Boot - Cross Shaft | 1 | 6368 |
| | | | |
| | | | |
| | | | |

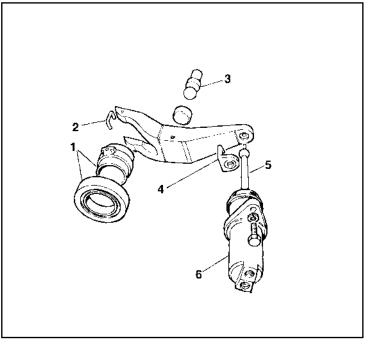

CLUTCH RELEASE, SERIES III

| Ref # | Description | Qty | Part # |
|-------|-------------------------------|-----|--------|
| 1 | Throw out Bearing | 1 | 7089 |
| 2 | Fixing staple | | |
| | (should be changed w/bearing) | 1 | 7084 |
| 3 | Pivot Pin for Clutch Release | 1 | 3779 |
| 4 | Slave Cylinder Push Rod clip | 1 | 3753 |
| 5 | Slave Cylinder Push Rod | 1 | 2897 |
| 6 | Slave Cylinder | 1 | 6751 |
| → | SLAVE CYLINDER REBUILDING KIT | KIT | 1957 |

*NLA = No longer available.