## **SWITCHES**

## **INSTRUMENTS/GAUGES**

Description	Part #
IGNITION	
Ignition Switch, IIA, Suffix "D" on (Solenoid type)	5667
Lock & Key for Switch 5667 & 7565	2016
Ignition & Lights thru Suffix "C"	7565
(does not include Headlight Knob or Lock/Key)	
Headlight Knob for Switch 7565	* <b>NLA</b> 7560
Ignition & Light thru Suffix "C", Replacement	7565A
Starter Switch, Push Type	2073
Knob for Starter Switch 2073	5926
Ignition Switch, Diesel	* <b>NLA</b> 8166
TURN SIGNAL	
Turn Signal, Dimmer, Horn, Series III	6742
Turn Signal, Column Mounted	5279
Bulb for Switch 5279	7547
Bulb for Turn Signal Indicator (6742)	5400
Flasher Unit, Turn Signal, 1969 on (2 prong)	7046
Flasher Unit, Turn Signal, thru 1968 (3 prong)	4068
HAZADD ELACHEDO	
HAZARD FLASHERS Hazard Warning, four way, Series III	7564
Knob for 7564	386
Bulb for 7564	* <b>NLA</b> 7592
Flasher Unit for Hazard Warning Switch,	112711002
1969 on (2 prong)	* <b>NLA</b> 7584
Heavy Duty Flasher - Recommended if towing	7561
SWITCHES, DASH PANEL, HEAD LAMP	
Dimmer Switch, Floor Mounted, 1961-72	1891
Panel Light, Dome Light on any 12V application, Toggle	
Panel Light, Dome Light on any 12V Application,	0100
Push/Pull	* <b>NLA</b> 2020
Headlights, Parking, Heater Hi, Low,	
IIA "D" & III, 3-position Toggle	5650
Switch for Wiper/Washer, IIA "F" & III, 2-speed	7553
Switch for Single Speed Wiper	5651
Dip Switch, 58-60	325
MISCELLANEOUS SWITCHES	
Reverse Lamp, found on Transmission	7562
Brake Light, Power Assisted, IIA "F" & III	7566
Brake Light, Hydraulic, Series II & IIA, "E"	5751
Oil Pressure Switch for Green Light, IIA & III	1958
Dash Socket - Black	* <b>NLA</b> 1555
Dash Socket, Red	1556
Dash Plug for 1555 & 1556	* <b>NLA</b> 7557
Choke Light Switch, Late IIA & III (yellow light)	* <b>NLA</b> 350
*NLA = No longer available.	

Some items in this section may be available on a special order basis or phone-order only. Please call for pricing and availability.

Description	Qty	Part #
SPEEDOMETER		
Speedometer, 88", w/Trip, Warning Lights,		
Series III	1	2837
Speedometer, 88" w/Warning Lights, Series IIA, '69-'71 (Special Order)	1	* <b>NLA</b> 6788
Speedometer, I,II,IIA, thru Suffix "C"	1	5823
(Special Order)	'	0020
Speedometer, I, II, IIA 109", 88" w/16" Tires (Special Order)	1	5601
Speedometer, IIA, 109 6 cyl. (Special Order)	1	5657
SPEEDOMETER CABLE		
Speedometer Cable & Casing, I,II,IIA	1	759
Speedometer Cable & Casing, III	1	6611
Reset Cable, Trip Odometer	1	6614
Cable, Inner Series I, w/nylon Ferrule	1	1538
Speedometer Clip, Series III	1	* <b>NLA</b> 1311
Set Screw Speedo-Cable to Housing	1	1333
GAS GAUGE & SENDER UNITS		
Gas Gauge, 88 & 109, Suffix "D" on	1	* <b>NLA</b> 6501
Gas Gauge, 88 & 109 Regular (before Suffix "D")	1	* <b>NLA</b> 3028
Gas Gauge, 109 Station Wagon Tank Sending Unit, 88 & 109 Regular,	1	5490
Suffix "D" on Tank Sending Unit, 109 Station Wagon,	1	6049
Suffix "D" on	1	6065
Tank Sending Unit, 88 & 109 Regular	1	* <b>NLA</b> 3024
Tank Sending Unit, 109 Station Wagon	1	* <b>NLA</b> 5408
NOTE: 3024 & 5408 may be used on Diesels, h warning light for low fuel will not operate.	oweve	r the
TEMPERATURE CAUCE		
TEMPERATURE GAUGE Engine Temperature Gauge, IIA, Suffix "D" on	1	* <b>NLA</b> 6500
Sending Unit for Gauge 6500	1	6026
Containing of the for Catago coop	•	0020
VOLTAGE GAUGE		
Voltage Gauge	1	* <b>NLA</b> 2824
AMMETER		
AMMETER Ammeter, Series I, II, IIA Suffix "C"	1	7585
Ammeter, Calibrated 50-0-50 amps,	1	7505
2 1/32" lighted	1	* <b>NLA</b> 2828
<b>3</b>		
OIL PRESSURE		
Switch, Oil Pressure Warning Light, IIA & III	1	1958
Gauge, Oil Pressure, Electric	1	* <b>NLA</b> 329
Sending Unit for 329	1	329A
Oil Pipe, Dual Gauge, Flexible, II/IIA	1	2097
Switch, Oil Pressure, Series II	1	241

\*NLA = No longer available.