



## STEERING COLUMN

Ref #	Description	Qty	Part #
1	Joint Washer, Side Cover Plate	1	5109
2	Rocker Shaft	1	*NLA 6363
3	Adjustable Ball Race	2	1540
4	Steel Balls for Race	20	593
5	Slip Ring, Complete, for Horn Contact	1	6574
6	Dust Cover & Horn Contact, "C" on	1	6228
5	Dust Cover & Horn Contact to Suffix "B"	1	6349
7	Dust Shield for Inner Column	1	*NLA 1534
8	Bush, Inner Column	1	188
9	Bearing, Inner Column, "C" onwards	1	399
10	Steering Drop Arm	1	*NLA 6342
11	Oil Seal, Rocker Shaft	1	859
12	Bush, Rocker Shaft	1	1644
14	Joint Washer, Steel	as required	1650
14	Joint Washer, Paper	as required	5002
15	Joint Washer, Steel	as required	*NLA 1647
15	Joint Washer, Steel	as required	1650
16	Joint Washer, Steel, .810"	as required	1648
17	Main Nut Assembly, LHSTG	as required	*NLA 1522
18	Steel Ball for Main Nut	12	493
19	Roller for Main Nut	1	1643
→	<b>STEERING BOX KIT</b>	<b>KIT</b>	

\*NLA = No longer available.

**Some items in this section may be available on a special order basis or phone-order only. Please call for pricing and availability.**

Ref #	Description	Qty	Part #
	<b>TIE RODS &amp; ENDS</b>		
	<b>TIE ROD ENDS,</b>		
	<b>(SOLD IN PAIRS, 1 RH, 1 LH)</b>	<b>3</b>	<b>418</b>
	Tie Rod, Wheel to Wheel (431/8")	1	6641
	Tie Rod, Steering Box to Relay	1	*NLA 6755
	Draglink, Steering Relay to Wheel	1	6757
	Dust Boot Tie Rod End	6	1423
	Steering Clamp	6	577898
	<b>STEERING RELAY</b>		
	(Located in the front Chassis Crossmember)		
	<b>STEERING RELAY ASSEMBLY</b>	<b>1</b>	<b>6976</b>
	Oil Seal, Top & Bottom	2	271
	Arm, Top	1	5241
	Arm, Bottom	1	3015
	Shaft, for Relay	1	*NLA 5220
	Distance Piece, for Early Shifts w/removable piece only	2	750
	Gasket, Top & Bottom	2	5679
	Ceramic Bushing, in halves	4	*NLA 5366
	Spring, for Relay	1	857
	Flange	1	*NLA 6977
→	<b>STEERING STABILIZER KIT</b>	<b>KIT</b>	<b>7510</b>
	Includes:		
	Shock and Mounting Hardware		
	Steering Stabilizer Shock - Regular	1	6497
	Steering Stabilizer Shock - Gas	1	6497B

\*NLA = No longer available.